



131 County Rd. 34 E. Jackson MN, 56143 1.800.446.8222  
www.eagleplows.com

## 2867 – Odes Dominator Plow Mount

Use the attached page to help with part identification during installation. We recommend using Loctite (Blue) on all fasteners.

Tools:	
1/2" Wrench or Socket w/Ratchet	

### **Plow Mount Installation:**

**STEP 1:** Remove the bottom front skid plate and front plastic bumper for easier mounting.

**STEP 2:** Place the square U-bolt (Item 8) over the frame rails underneath the front axle boot. Lift the plow mount (Item 1) up to the front of the machine where the skid plate was and line the slots at the back of the plow mount up with the square U-bolts. Place a 5/16 flat washer (Item 4) and 5/16 Nylock nut (Item 3) on the threaded end of the U-bolts. Do not fully tighten.

**STEP 3:** Slide the two round U-bolts (Item 9) over the front bumper tube near the winch and line up with the slots at the top of the plow mount. Place another 5/16 flat washer (Item 4) on each side of the U-bolts and start a 5/16 Nylock nut (Item 3) on each end as well. Do not fully tighten.

**STEP 4:** Square the mount up to the front of the machine and then fully tighten all of the hardware working in a crisscross pattern to keep the mount straight.

**STEP 5:** Reinstall the front plastic bumper.

### **Attaching the Push Tube to the Plow Mount:**

**STEP 1:** Roll the UTV over the push tube assembly.

**STEP 2:** Lift the push tube up to the plow mount and line the holes in the ears on the push tube up with the holes in the ears on the plow mount.

**STEP 3:** Insert each of the 3/4 x 2" clevis pins (Item 6) through the holes and secure in place using the hair pin clips (Item 7).

**STEP 4:** Attach the lift system of choice and the plow is ready for use.

### **Removing the Push Tube from the Plow Mount:**

Reverse the previous steps to remove the push tube. Once the 3/4" pins are removed, place them back into the holes on the push tube assembly with the hair pin clips to prevent them from getting lost when the plow is not in use.


### **Additional Notes:**

- (Optional) Mount the cable stop (Item 2) using the wire clip (Item 5) along the winch cable to prevent interference between the plow system and the machine when the plow is lifted.

It is the operator's responsibility to periodically check all fasteners/mounting hardware to ensure none have come loose during use and to check for any signs of wear.

Do NOT plow at speeds over 5mph. Doing so will void warranty on any parts that become damaged or break.

ITEM NO.	PART NUMBER	QTY	DESCRIPTION
1	2867-4	1	PLOW MOUNT WLDMT, ODES
2	3918-4	1	CABLE STOP
3	HDW152	8	NUT, 5/16-18 NYLOCK
4	HDW154	8	WASHER, 5/16" FLAT, SAE, Z
5	HDW1247	1	3/16 IN WIRE ROPE CLIP
6	HDW1260	2	CLEVIS PIN, 3/4 X 2, ST,ZN
7	HDW1261	2	HAIRPIN, Ø1/8 X 2-1/2" Z
8	HDW1317	2	U-BOLT, 5/16X1-1/2X3-1/2 SQ ZN
9	HDW1414	2	U-BOLT, 5/16 X 1-3/4 X 3

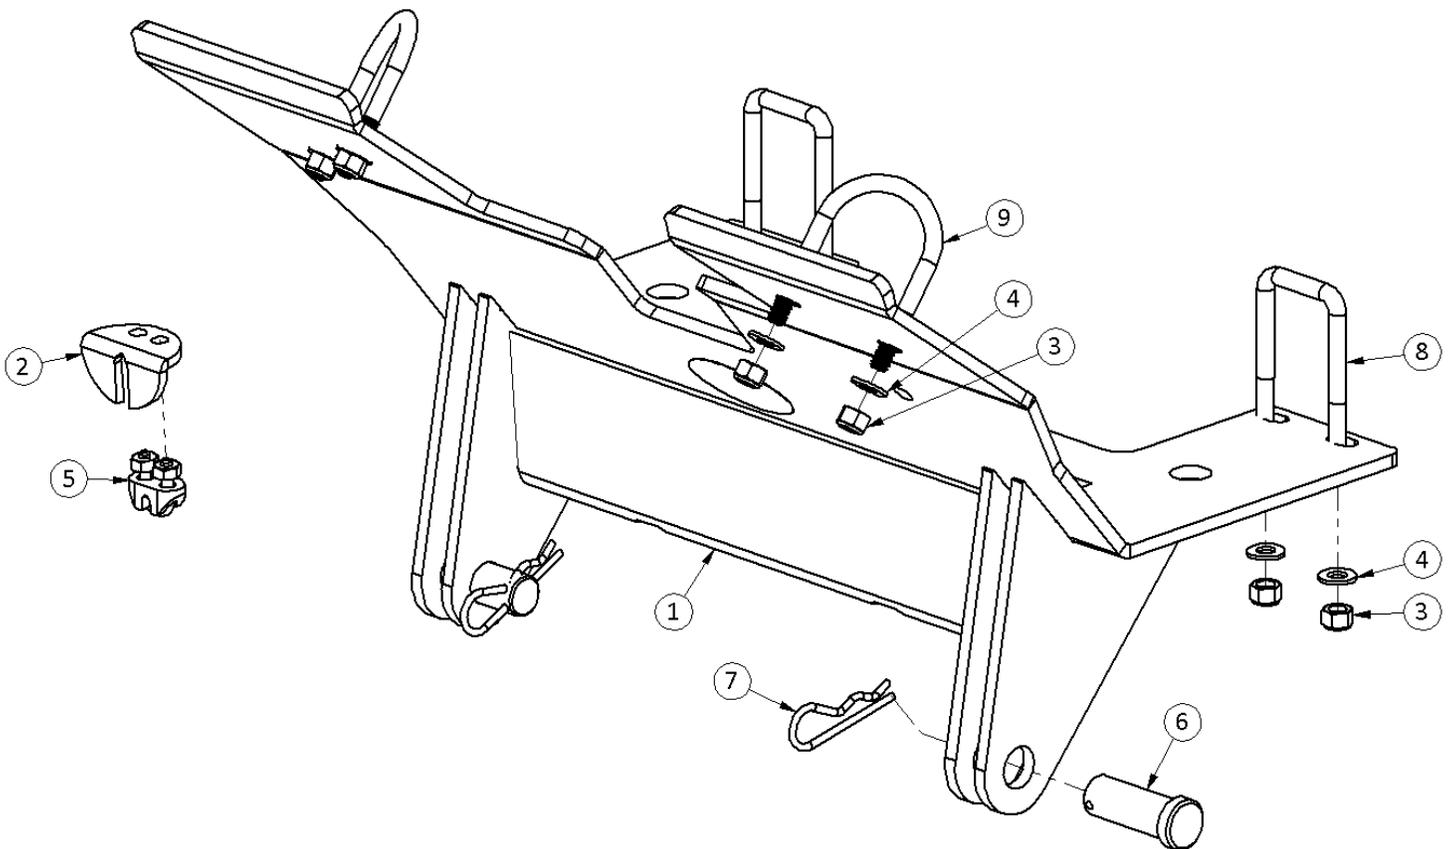

All hardware is a part of HDW1718 hardware kit.

\*Note: There may be hardware remaining in the kit once the plow mount is installed because several plow mounts share hardware kits.